



# MacBook Pro 15" Unibody Early 2011 Hard Drive Replacement

Hard Drive prereq.

Written By: Walter Galan



## INTRODUCTION

This guide is a prereq only.

## Step 1 — Hard Drive




- Remove two Phillips screws securing the hard drive bracket to the upper case.
- ⓘ These screws are captive to the hard drive bracket.

## Step 2



- Lift the retaining bracket out of the upper case.



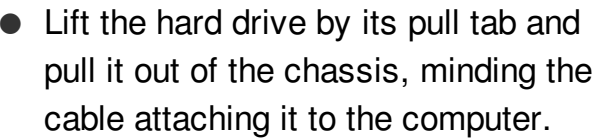

## Step 4



- Remove the hard drive cable by pulling its connector straight away from the hard drive.

To reassemble your device, follow these instructions in reverse order.

